



**Use Treadlock**




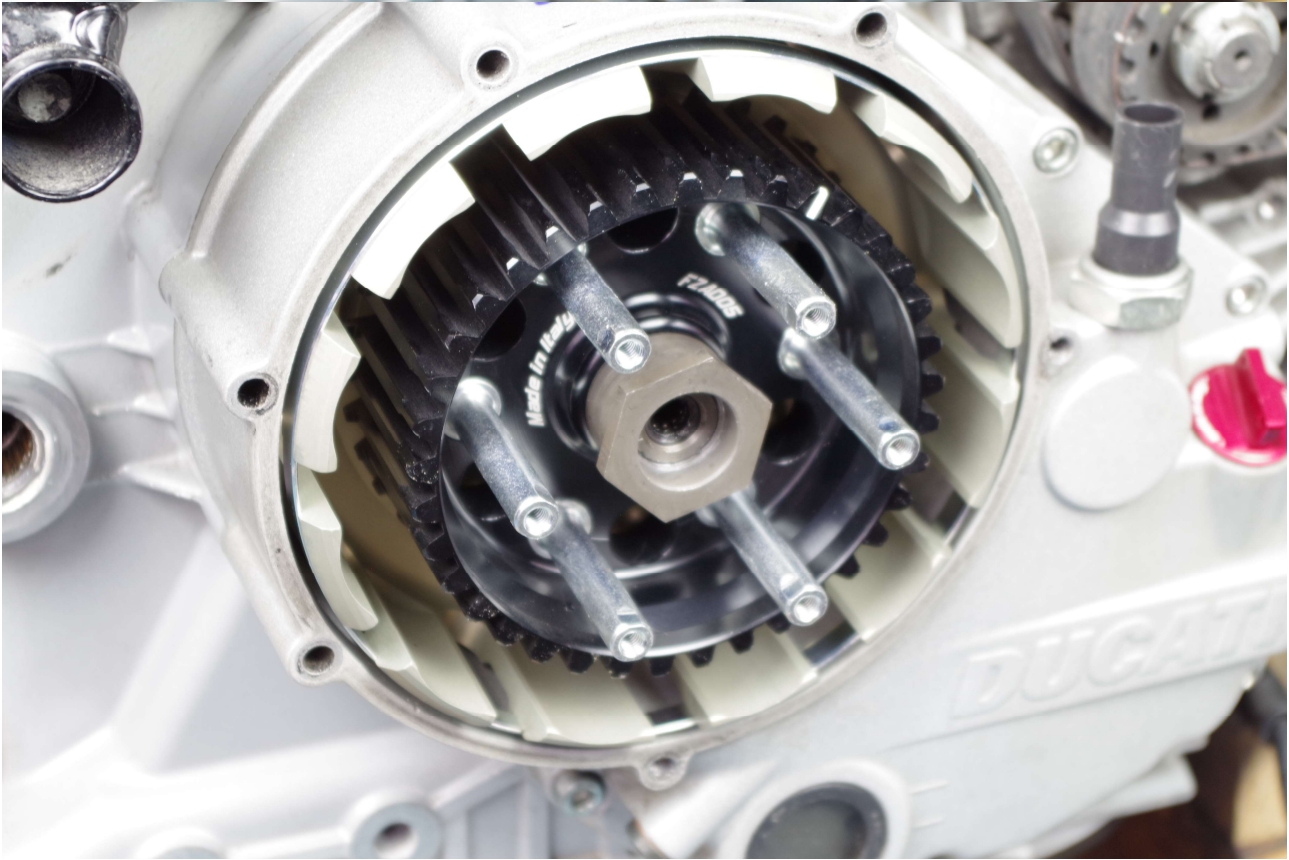


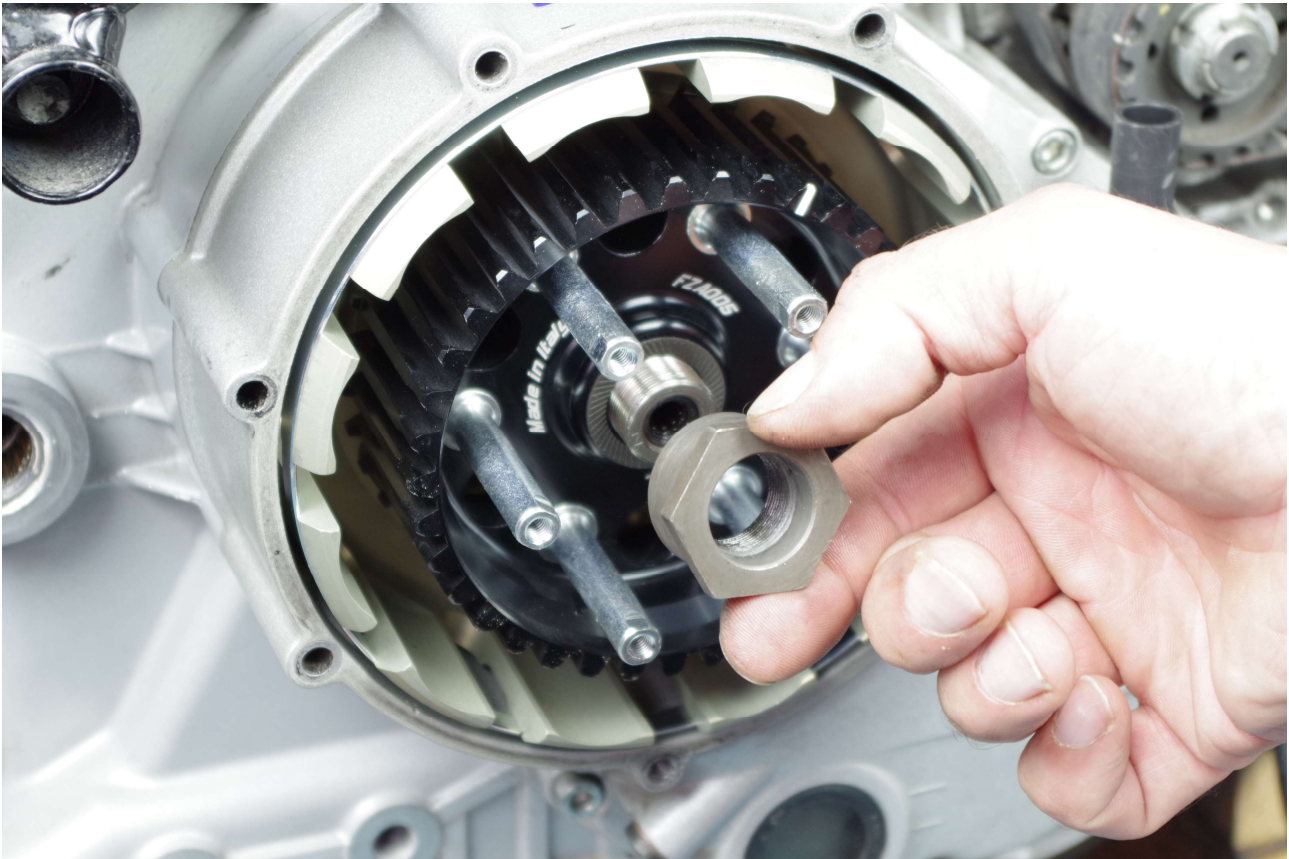

**Put the torque wrench to 185 Nm**



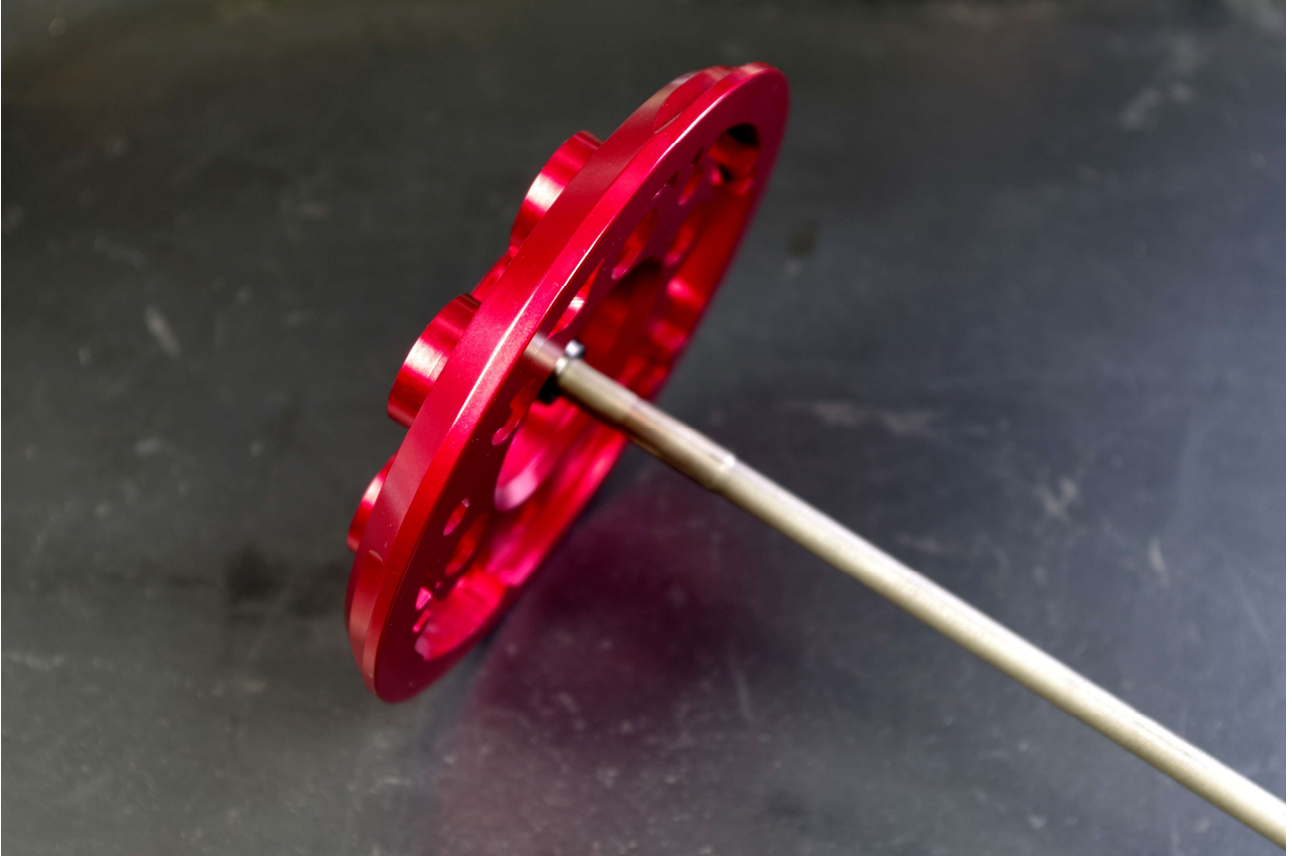

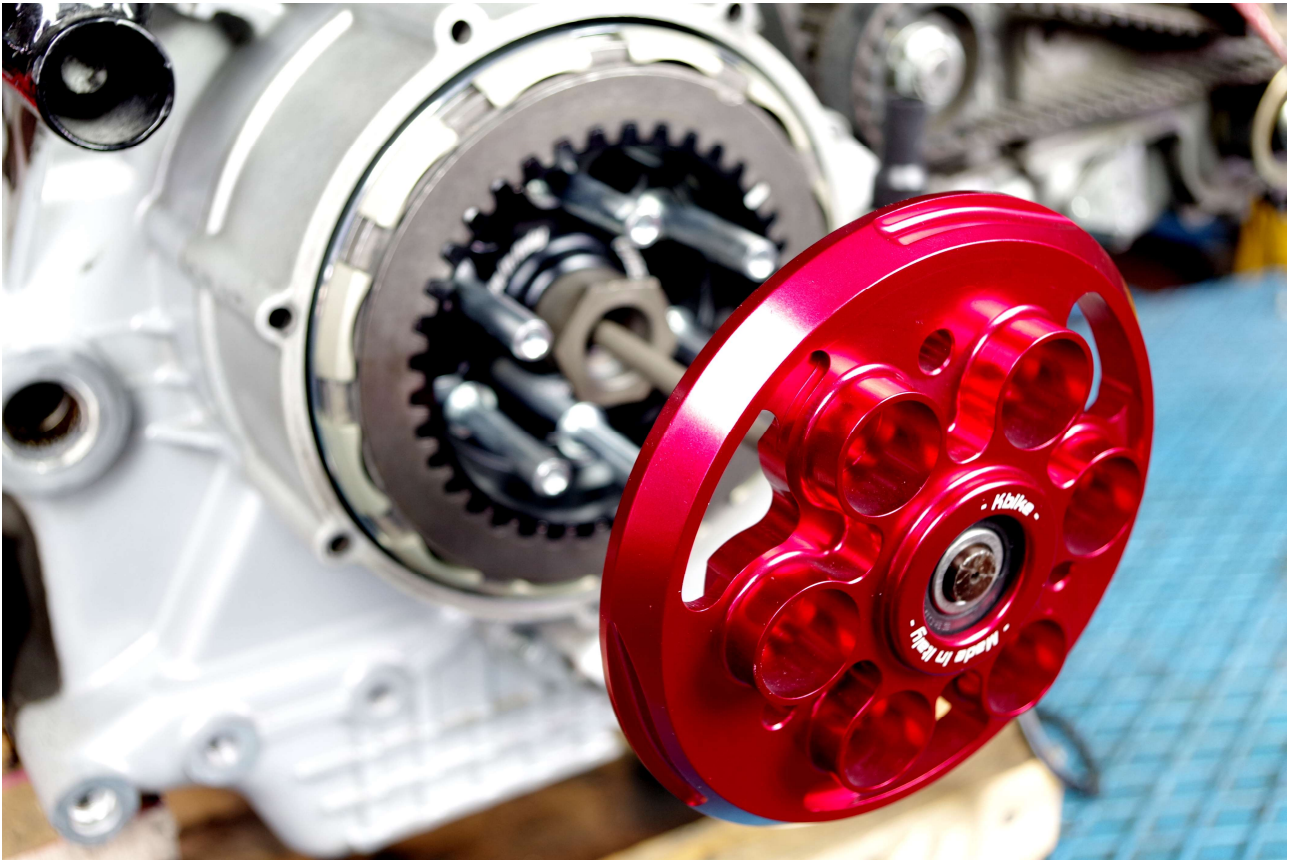

**The reference point in the pressurplate must match whit the clutch drum line**

